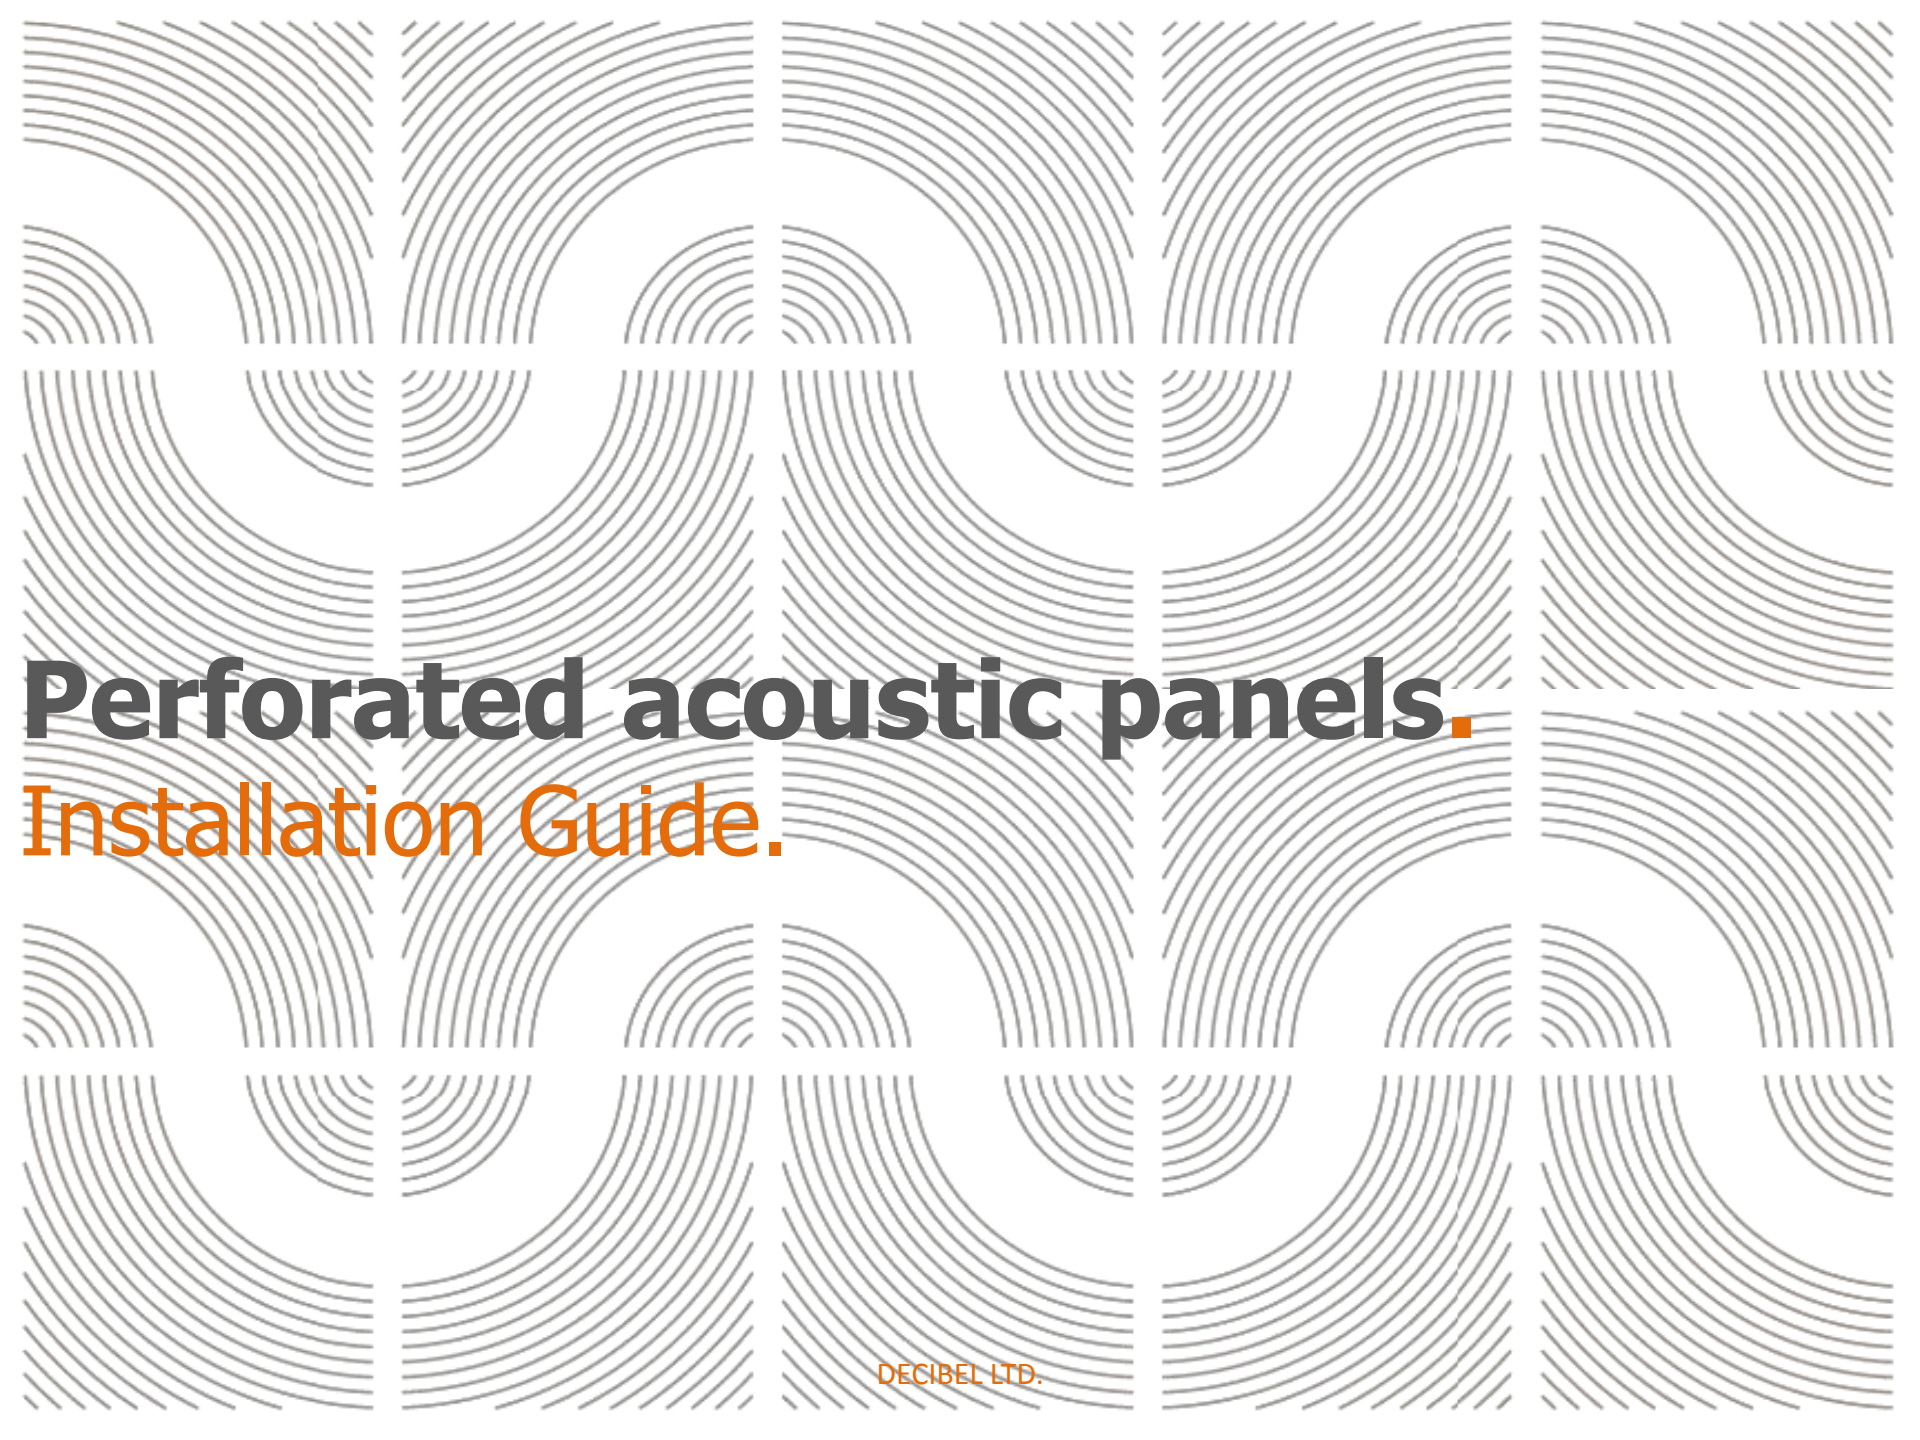


The background of the entire page is a repeating pattern of concentric circles. These circles are arranged in a grid-like fashion, with each circle centered within a square panel. The lines are thin and grey, creating a subtle, textured effect across the white background.

Perforated acoustic panels.

Installation Guide.

Preparation of the wall

- Clean the wall thoroughly with a dry cloth in order to remove dust.



Leveling and positioning

- Plot a horizontal line with an electronic level or hemp. This line will serve to level the panels.
- Determine the position of the first panel, and plot a vertical line perpendicular to the horizontal, which will serve as the start of the panel arrangement.




Installation of the first panel

- Place the panel on the already outlined beginning point without gluing it to outline its dimensions.
- Leave the panel on the ground. Apply glue on the entire area between the outlines on the wall using a brush. Once applied carefully, let the glue develop for 30sec.
- Carefully place the panel and use a level to check its horizontal and vertical levels. Press the panel against the wall for at least 2 minutes, while the adhesive strengthens.

Installation of subsequent panels

- Subsequent panels are fitted with a 2 mm to 5 mm gap between each other.
- Keep using the same technology of application of the adhesive.

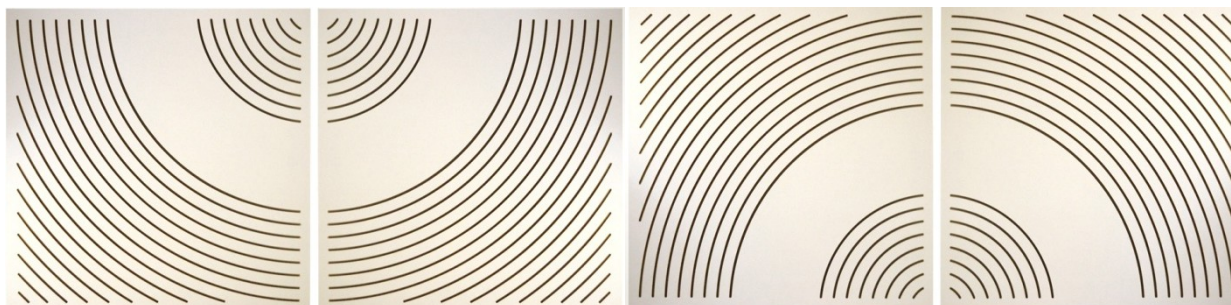

Drying process



- Leave your panel arrangement to dry for at least 24h.
- Do not clean the panels during the drying process.
- Do not lean furniture or other heavy items on the newly glued panels.
- We advise to prop up the lower level panels with wooden beam during the drying process.

Your amazing new design

- After the 24hours of drying are over, you can clean your new panels with soft damp cloth and **invite some friends to have a look at your new wall design.**
- **Thank you for your great purchase!**



DECIBEL LTD.